

COMPONENT COVERAGE GUIDE

DIAMOND CARE PROTECTION PLAN[®]



**MITSUBISHI
MOTORS**

Drive your Ambition


Why Diamond Care?

For more than 30 years, we've provided Service You Can Trust - your choice of repair facility from our nationwide network of Mitsubishi dealers and authorized repair facilities. Enjoy worry-free driving and the peace of mind that comes with a Diamond Care Extended Protection Plan.

Protect Your Investment

- A Diamond Care Protection Plan can protect you from unexpected repair costs once your factory warranty expires
- Choice of plan that best suits your needs with up to 15 time/mileage options available
- Payment-free service, other than your deductible - Dealers are paid directly
- New & Pre-Owned Vehicles as well as non-Mitsubishi vehicles are protected by Diamond Care

Long Term Coverage

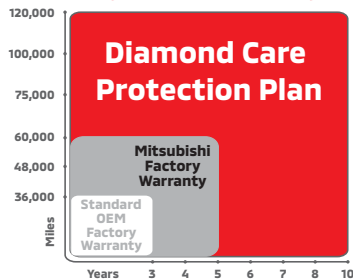

- Cover essential vehicle systems beyond your factory warranty - up to 10 years and 120,000 miles¹

Additional Benefits

Start immediately and help to create a worry-free driving experience.

Emergency Roadside Assistance

- 24 hours a day, 365 days a year

Trip Interruption

- Reimbursement up to \$500 for alternate transportation, meals and lodging with covered repair when you are 100+ miles from home

Car Rental Assistance

- Reimbursement for actual expenses of substitute transportation up to 5 days at \$42/day, maximum of \$210 per covered repair

Towing


- Reimbursement for towing to the nearest repair facility, up to \$100 per claim

Customer Assistance

- Nationwide coverage should you travel or move - help finding a repair shop is just a quick call away


¹10 year / 100,000 mile term only available on New and CPO Mitsubishi vehicles.

Nearly 50% of all Roadside Assistance calls are due to non-mechanical issues.

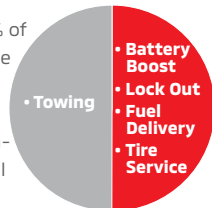

Guard Against the Rising Cost of Repairs

You wouldn't give up the manufacturer's warranty on your new purchase for a small discount, so why wouldn't you enhance the mechanical protection for a few extra dollars?

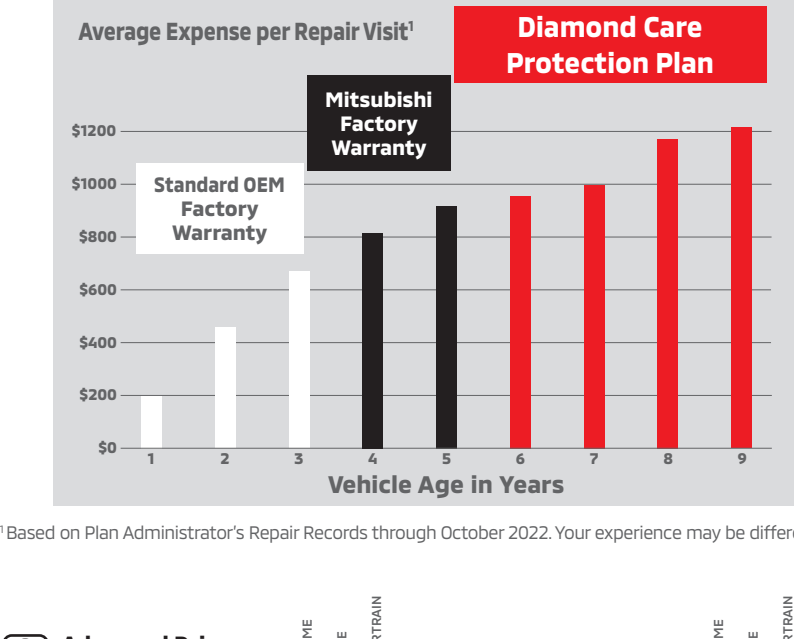

¹ Based on Plan Administrator's Repair Records through October 2022. Your experience may be different.

Advanced Driver Assistance Systems

	SUPREME	DELUXE	POWERTRAIN
ICC STEERING SWITCH	18932	■	■
COUVR R/LS	18937	■	■
BUTTON-DRIVE ASSISTANCE	23103	■	■
DISTANCE WARNING SNR SW	25126	■	■
SWITCH ASSY - BSW	25126	■	■
SWITCH-PARK-PRO-PILOT	25139	■	■
ICC BRAKE HOLD RELAY	25184	■	■
ICC STRNG SWITCH	25185	■	■
ICC BRAKE SWITCH	25186	■	■
AROUND VIEW MONITOR SWITCH	25308	■	■
ICC BRAKE SWITCH	25321	■	■
SWITCH-STEERING WHEEL/PRO PILOT	25350	■	■
FRNT SONAR SENSOR BUZZER	25659	■	■
BUZZER-SONAR SENSOR	25660	■	■
SONAR ROAD SENSOR	25965	■	■
SWITCH-SENSOR OFF(PARKING/SONAR)	25988	■	■
SONAR SWITCH ASSY	25989	■	■
FRONT SONAR SENSOR NS	25993	■	■
FRONT CORNER SONAR SENSOR	25994	■	■
REAR SONAR SENSOR NS	25996	■	■
SENSOR-SONAR REAR SIDE	25998	■	■
BUZZER ASSY-LKS / LDW	26349	■	■
WARNING CHIME/BUZZER	26350	■	■
IC WARNING CHIME	26353	■	■
BUZZER ASSY	26354	■	■
BSW/BSI INDICATOR	26670	■	■
CONTROL ASSY-BACK VIEW	28262	■	■
RADAR - SIDE	28405	■	■
UNIT AVM CONTROL	28406	■	■
CAMERA ASSY-SIDE VIEW	28406	■	■
VEHICLE DATA TRANSMITTER ASSY	28420	■	■
CONTROL UNIT - ADAS2	28424	■	■
ADAS CONTROLLER	28427	■	■
BSW CONTROL ASSY	28428	■	■
CONTROL MODULE - BUZZER/DRIVER ASSISTANT	28429	■	■
SIDE OBSTACLE WARNING SENSOR	28430	■	■
SENSOR UNIT-INT/ROD	28436	■	■
CONTROL UNIT- DISTANCE, ICC	28437	■	■
CAMERA ASSY-BACK VIEW	28442	■	■
CAMERA ASSY - LKS / LDW	28443	■	■
CAMERA ASSY-MIRROR/SMART ROOM	28445	■	■
REAR SONAR SENSOR BRACKET	28452	■	■
CONTROL MODULE BSW	28456	■	■
CAMERA ASSY-FR VIEW	28461	■	■
REAR VIEW CONTROL ASSY	28462	■	■
SOLENOID VALVE ASSY-BACK VIEW CAMERA	28479	■	■
CAN GATEWAY CONTROL ASSY	28481	■	■
SOLENOID VALVE ASSY - BACK VIEW CAMERA	28489	■	■
BUZZER-SONAR SENSOR, FRONT	28501	■	■
CONTROL UNIT-SONAR SENSOR	28532	■	■
TUBE ASSY - WASHER-REAR VIEW CAMERA	28975	■	■
AVM CAMERA FINISHER	79979	■	■
CAMERA CONTROLLER	284A1	■	■
LANE KEEP CAMERA	284G2	■	■
SIDE OBSTACLE WARNING SENSOR ASSY	284K0	■	■
REAR VIEW CAMERA KT	A1A58	■	■

Air Conditioner/Heater

A/C COMP IDLER PULLEY	11924	■	■
IDLER PULLEY	11925	■	■
AIR INTAKE DUCT	21467	■	■
RESERVOIR TANK HEATER	21710	■	■
RESERVOIR TANK CAP HEATER	21712	■	■
ATMOSPHERE PRESSURE SENSOR	22367	■	■
REAR HEATER CONTROL	25207	■	■
HEATER RELAY	25208	■	■
HEATER RELAY	25214	■	■
COMPRESSOR RELAY	25218	■	■
FCID RELAY	25224	■	■
RR A/C RELAY	25225	■	■
FAN MOTOR RELAY	25246	■	■
MAX COLD DOOR RELAY	25257	■	■
REAR HEATER RELAY	25274	■	■
AFS RELAY	25295	■	■
RR A/C HEATER	25327	■	■
HEATER UNIT	27000	■	■
REAR HEATER CORE	27013	■	■
REAR HEATER MOTOR	27014	■	■
HEATER CONTROL ASSY	27030	■	■
VACUUM SELECTOR VALVE	27031	■	■
ATC CONTROL ASSY	27032	■	■
REAR HEATER UNIT	27035	■	■
221-VACUUM CONTROL SWITCH	27037	■	■
AIR COND. HARNESS	27038	■	■
271-SWITCH	27041	■	■
221-THERMO CONTROL RELAY	27045	■	■
BLOWER CASE/INTAKE BOX	27065	■	■
MOTOR & FAN	27070	■	■
HEATER CONNECTOR	27071	■	■
HEATER SWITCH RESISTOR	27077	■	■
VACUUM ACTUATOR/POWER SERVO	27080	■	■
VACUUM TANK	27084	■	■
VACUUM WATER COOL	27090	■	■
VACUUM CHECK VALVE	27176	■	■
HEATER COIL	27176	■	■
HEATER COCK	27176	■	■
GAS SENSOR ASSY	27118	■	■
A/C CONTROL CABLE	27134	■	■
HEATER CONTROL CABLE	27135	■	■
MODE DOOR ACTUATOR	27141	■	■
PTC HEATER ASSY	27143	■	■
PIPE ASSY HEATER	27144	■	■
REAR HEATER AMPHIFIER	27150	■	■
REAR HEATER RESISTOR	27151	■	■
HEATER TUBE	27185	■	■
THERMOSTAT	27322	■	■
THERMO CONTROL UNIT	27330	■	■
REAR BLOWER MOTOR ASSY	27375	■	■
FAN IMPELLER	27383	■	■
REAR COOLING UNIT	27405	■	■
REAR EVAPORATOR	27410	■	■
RR A/C-HIGH TUBE ASSY	27413	■	■
REAR A/C-HIGH TUBE ASSY	27414	■	■
RR A/C COOLER CASE	27415	■	■
REFRIGERATOR MOTOR ASSY	27433	■	■
AC-EVAPORATOR ASSY	27461	■	■
SWITCH-HIGH PRESSURE	27463	■	■
AC-EXPANSION VALVE	27465	■	■
AC-COMPRESSOR ASSY	27463	■	■
FAN CONTROL AMPHIFIER	27461	■	■
ELECTRIC A/C UNIT	27435	■	■
AC-RECEIVER DRIVER	27460	■	■
A/C-ON/OFF PRESSURE SWITCH	27461	■	■
AC-CONDENSER	27460	■	■
CONDENSER FAN & MOTOR	27461	■	■
FAST IDLE DIAPHRAGM	27465	■	■
SOLENOID VALVE	27469	■	■
AC-SUCTION THROTTLE VALVE	27460	■	■
REAR FAN SWITCH ASSY	27465	■	■
SIDE VENTILATOR DUCT	27470	■	■
ACCELERATOR CUT SWITCH	27471	■	■
SHIFT ACTV AC COMB VALVE	27472	■	■
AC-JOINT CONNECTOR	27473	■	■
VACUUM LOCK-OUT SWITCH	27475	■	■
FLOOR DUCT SENSOR	27700	■	■
VENTILATOR DUCT SENSOR	27701	■	■
DEFROSTER NOZZLE SENSOR	27702	■	■
ROOF IN-CAR SENSOR	27703	■	■
FOOT IN-CAR SENSOR	27704	■	■
SUNAR SENSOR	27705	■	■
SENSOR ORILL	27706	■	■
HEATER FLOOR DUCT SENSOR	27707	■	■
SENSOR-AIR TEMP/PTH HEATER OUTLET	27712	■	■
FAN CONTROL AMPHIFIER	27717	■	■
HUMIDITY SENSOR ASSEMBLY	27719	■	■
INTAKE SENSOR	27723	■	■
ASPIRATOR	27726	■	■
IN-VEHICLE SENSOR	27727	■	■
ASPIRATOR DUCT	27728	■	■
AC-COMPRESSOR SHAFT SEAL	27730	■	■
WASHER NOZZLE	27732	■	■
B LEVEL MOTOR ACTUATOR	27736	■	■
FEEDBACK RHEOSTAT	27738	■	■
AIR MIX DOOR ACTUATOR	27740	■	■
DOUBLE SOLENOID VACUUM VALVE	27741	■	■
MAGNETIC CLUTCH ASSY	27742	■	■
AC-SNAP RING	27744	■	■
MAGNETIC COIL	27745	■	■
UPPER VENTILATOR OR ACTUATOR	27746	■	■
DEFROSTER DOOR ACTUATOR	27747	■	■
WASHER NOZZLE	27748	■	■
INTAKE-AIR MIX DOOR ACT	27749	■	■
221-IN VEH SENSOR/ASPIRATOR	27750	■	■
ASPIRATOR FAN	27752	■	■
AMBIENT SENSOR	27755	■	■
SENSOR - AMBIENT AIR TEMP	27757	■	■
AUTO TEMP CNTRL UNIT	27762	■	■
UNIT-CONTROL-HEAT PUMP	27763	■	■
SUNLOAD SENSOR AMPHIFIER	27764	■	■
WATER CONTROL VALVE	27765	■	■
SOLENOID VALVE SET	27770	■	■
AUTO-AIR CONTROL AMP	28520	■	■
RPM SENSOR	28524	■	■
MAGNET CLUTCH AMPHIFIER	28525	■	■
PTC HEATER HARNESS CONNECTR	29511	■	■
CONDENSER ASSY	92110	■	■
CONDENSER SIDE SEAL	92184	■	■
EXPANSION VALVE	92200	■	■
WASHER NOZZLE	92230	■	■
UNIT-HEAT SWITCH	92230	■	■
THERMAL PROTECTOR	92236	■	■
ACCELERATION CUT TIMER	92330	■	■
SENSOR HEAT TIMER	92331	■	■
HEATER OUTLET TUBE ASSY	92414	■	■
HEATER TUBE DRAIN COIL	92425	■	■
REAR HEATER TUBE	92433	■	■
FR COOLER HIGH PIPE ASSY	92441	■	■
REAR COOLER PIPES	92460	■	■
REAR COOLER HIGH PIPE ASSY	92462	■	■
AC-REAR COOLER TUBES	92463	■	■
REAR HIGH/LOW COOLER PIPE	92471	■	■
HEATER PUMP ASSY	92516	■	■
COMPRESSOR RPM SENSOR	92855	■	■
PT-G SENSOR ASSY	98805	■	■

Body & Interior

TRANSISTOR IGNITION UNIT	22020	■	■
AIR TEMPERATURE SENSOR	22631	■	■
SUN ROOF HARNESS	24162	■	■
TAIL GATE SWITCH	25141	■	■
G-FORCE SENSOR	25142	■	■
UNIT-WIRELESS CHARGE	25168	■	■
POWER SEAT RELAY	25177	■	■
ACTUATOR-BACK DOOR LOCK	25189	■	■
SUN ROOF SLIDE SWITCH	25191	■	■
SUN ROOF RELAY	25192	■	■
REAR WINDOW LOCK SWITCH	25201	■	■
MIRROR HEAT RELAY	25209	■	■
STORAGE OPENER RELAY	25209	■	■
RELAY - STORAGE OPEN CANCELR	25211	■	■
RELAY - ROOF R/LOCK OPENER	25212	■	■
RELAY - TOP INTERLOCK	25213	■	■
RELAY-TRUNK LID OPENER	25221	■	■
HEADLAMP RETRACT RELAY	25241	■	■
ACTUATOR-UPPER PUMP RELAY	25242	■	■
HEADLAMP CLEANER SWITCH	25261	■	■
ANTI-THEFT RELAY	25263	■	■
TCS RELAY	25265	■	■
FUEL LID OPENER RELAY	25271	■	■
NAVI SPIN RELAY	25276	■	■
VEL ACTUATOR MOTOR RELAY	25303	■	■
POWER SEAT SWITCH	25310	■	■
TOP STACK CONTROL UNIT	25313	■	■
W/DOOR CONTRL ASSY	25348	■	■
CONVERTIBLE TOP SHADE SLIDE	25351	■	■
CONVERTIBLE TOP SWITCH	25362	■	■
TOP STACK FRONT LMIT SWITCH	25365	■	■
TOP STACK REAR LMIT SWITCH	25366	■	■
STOR HATCH RH LMIT SWITCH	25367	■	■
BACK DOOR HATCH OPENER SWITCH	25380	■	■
SWITCH - STORAGE OPENER	25383	■	■
TRUNK OPENER CANCEL SWITCH	25385	■	■
BACK DOOR SWITCH - CLOSURE	25386	■	■
SWITCH ASSY - FOLDING ROOF	25425	■	■
TOP OPENER SWITCH	25426	■	■
SEAT MEMORY SWITCH	25491	■	■
SEAT MEMORY CANCEL SWITCH	25492	■	■
RR POWER SEAT SWITCH	25494	■	■
POWER FOLD SEAT SWITCH	25502	■	■
DRIVER MODE SELECTOR	25534	■	■
ASCD STEERING CONTROLLER SWH	25531	■	■
SPRNL CABLE	25554	■	■
REMOTE-TRUNK MIRROR SWITCH	25580	■	■
HEATED MIRROR SWITCH	25591	■	■
ASCD SWITCH	25592	■	■
AUDIO SWITCH	25594	■	■
3RD SEAT RECLINING SWITCH	25945	■	■
EL-DRIVE COMPUTER DISPLAY	25987	■	■
WIPER ARM	26380	■	■
REAR WIPER ARM	26380	■	■
MOTOR-LIFT 3RD ROW	26381	■	■
REAR WIPER NOZZLE	26382	■	■
WASHER TANK	26383	■	■
REAR WASHER TANK	26384	■	■
SENSOR-OPTICAL	27715	■	■
CONTROL ASSY-USB DC CHARGER	28386	■	■
MULTIFUNCTION SWITCH	28393	■	■
ASCD SERVO VALVE	28401	■	■
ASCD CABLE	28403	■	■
ASCD SOLENOID VALVE	28415	■	■
REAR LIFT 3RD ROW	28417	■	■
PS COLUMN CNTRL ASSY	28502	■	■
PS MAIN CONTROL ASSY	28503	■	■
PS SUB CONTROL ASSY	28504	■	■
POWER WINDOW AMPHIFIER	28515	■	■
CONTROL UNIT - FOLDING ROOF	28521	■	■
RAIN SENSOR ASSY	28536	■	■
DOOR MIRROR CONTROL UNIT	28548	■	■
DIAGNOSIS SENSOR UNIT	28555	■	■
SENSOR-SONDUS UNIT	28556	■	■
CONTROL UNIT - CLOSURE TRUNK	28557	■	■
POWER SEAT CONTROL UNIT	28565	■	■
WASHER TANK INLET	28916	■	■
ELECTRIC SHIFT CONTROL UNIT	31038	■	■
GAUGE/OIL LEVEL	31086	■	■
SEAT RELEASE CABLE & KNOB	36329	■	■
TRUNK LID INSIDE RELEASE HANDLE	36400	■	■
TORQUE SPLT CONTROL UNIT	41650	■	■
IGPM CNTRL UNIT	42001	■	■
FR A/C UNIT ASSY-LH	52301	■	■
FR A/C UNIT ASSY - RH	52302	■	■
FR A/C UNIT ASSY - LH	52343	■	■
HEIGHT SENSOR ASSY	53810	■	■
ACTIVE GRILLE SHUTTER	62304	■	■
HOOD LOCK CABLE ASSY	65620	■	■
SECONDARY HOOD LOCK CNTRL AS	65670	■	■
*AIR INTAKE	65820	■	■
*THFT WARNING (PIN) SWITCH	68542	■	■
*AIR INTAKE	73462	■	■
SUN ROOF WIRE	73666	■	■

Brakes

VACUUM PUMP ASSY	14650	■	■
CONNECTOR/LAMP	14655	■	■
DELIVERY CONNECTOR	14680	■	■
ASCD SET & CANCEL SWITCH	18930	■	■
SENSOR ASSY PRESSURE	22368	■	■
TCS THROTTLE CONTROL UNIT	23790	■	■
SWITCH-BRAKE OFF/EMERGENCY	25124	■	■
TCS SWITCH ASSY	25245	■	■
ELECTRIC PARKING BRAKE SWT	25176	■	■
ENGINE RESTANT RELAY	25178	■	■
ABS MOTOR RELAY	25187	■	■
ASCD RELAY	25234	■	■
ASCD HOLD RELAY	25284	■	■
VOC/TCS/ABS RELAY BOX	25285	■	■
ABS/TCS/VOC CONTROL UNIT ASSY	25286	■	■
STOP LAMP SWITCH	25320	■	■
ASCD CATCH SWITCH	25323	■	■
ASCD CATCH SWITCH	25324	■	■
ASCD ACTUATOR	25325	■	■

 Engine (cont.)		SUPREME	DELUXE	POWERTRAIN
EC-ECC CONTROL UNIT	23710	■	■	■
CRANK POSITION SENSOR (OBD)	23731	■	■	■
CRANK POSITION SENSOR (REF)	23732	■	■	■
SENSOR-IDLE STOP	23737	■	■	■
VCM CONTROL UNIT	23740	■	■	■
VVL ACTUATOR ASSY	23745	■	■	■
IVTC POSITION SENSOR	23750	■	■	■
VTC ASSY-ELECTRIC	23757	■	■	■
VTC SOLENOID ASSY	23796	■	■	■
FUEL LEVEL SENSOR	25060	■	■	■
COOLANT TEMP. SENSOR	25080	■	■	■
WATER LEVEL SENSOR	25083	■	■	■
EC-BOOST/VACUUM SENSOR	25085	■	■	■
SENSOR-EVAP CONT SYST PRESUR	25086	■	■	■
FUEL CUT-OFF SWITCH	25146	■	■	■
THROTTLE MOTOR RELAY	25171	■	■	■
RADIATOR COOLING FAN RELAY	25217	■	■	■
PT-OIL PRESSURE SENDING UNIT	25240	■	■	■
PT-OIL PRESSURE SWITCH	25244	■	■	■
COOLING FAN CONTROLLER	25305	■	■	■
COOLING FAN CONTROL SOLENOID	25405	■	■	■
BLOWER MOTOR TIMER	28912	■	■	■
WATER OUTLET	29005	■	■	■
WATER INLET	29006	■	■	■
PRESSURE TUBE	45455	■	■	■
SENSOR TURBOCHARGER SPEED	59126	■	■	■
VALVE ASSY WATER	92231	■	■	■
TUBE BOOST SENSOR	97195	■	■	■
INSULATOR-INTAKE PORT	11000	■	■	■

Fuel System

EC-AIR CONTROL VALVE	11811	■	■	■
EC-EGR TUBE	14120	■	■	■
EC-POWER VALVE ASSY	14510	■	■	■
POWER VALVE SOLENOID VALVE	14517	■	■	■
POWER VALVE ACTUATOR	14518	■	■	■
EC-EGR CONTROL VALVE	14710	■	■	■
EC-EXHAUST TEMP. SENSOR	14730	■	■	■
TUBE EGR COOLER INLET	14736	■	■	■
EC-BPT VALVE	14741	■	■	■
AIR PUMP	14812	■	■	■
EC-AIR INJECTION PIPE	14823	■	■	■
AIR CUT SOLENOID VLV	14830	■	■	■
EC-AIV CONTROL VALVE	14832	■	■	■
EC-AB VALVE	14835	■	■	■
EC-AIR INDUCTION VALVE	14854	■	■	■
SERVICE PORT-EVAP	14939	■	■	■
SCV SOLENOID VALVE	14951	■	■	■
POWER VALVE SOLENOID	14952	■	■	■
EC-EPC VALVE	14953	■	■	■
EC-EGR SOLENOID VALVE	14954	■	■	■
EC-VACUUM CUTTING SOLENOID	14955	■	■	■
EC-MIX RATIO CONT SOLENOID	14956	■	■	■
EC-THROTTLE CONTROL SOLENOID	14957	■	■	■
EC-SPARK DELAY VALVE	14958	■	■	■
EC-PRES REG CONT SOL VALVE	14960	■	■	■
EC-ALTITUDE COMPENSATOR	16044	■	■	■
EC-DASH POT	16182	■	■	■
IDLE SPEED CONTROL UNIT	16250	■	■	■
AIR DUCT ASSY	16577	■	■	■
INSULATOR-FUEL PUMP/HIGH PRESSURE	16634	■	■	■
EC-EFI THROTTLE CHAMBER	17118	■	■	■
DETONATION SENSOR	22060	■	■	■
EC-EGR WATER TEMP. SENSOR	22120	■	■	■
EC-VACUUM TANK	22327	■	■	■
VIAS VACUUM TANK ASSY	22328	■	■	■
CANISTER CONTROL VAC CK SW	22360	■	■	■
EC-VACUUM SWITCH	22361	■	■	■
EC-EGR VACUUM CONTROL VALVE	22365	■	■	■
EC-EQ/ECCS CONTROL UNIT	22611	■	■	■
THROTTLE VALVE SWITCH	22620	■	■	■
THROTTLE POSITION SENSOR	22621	■	■	■
EC-CYL. HEAD TEMP. SENSOR	22632	■	■	■
INTAKE MAN RUNNER CONTRL SEN	22637	■	■	■
EC-AIR REGULATOR	22660	■	■	■
EC-PRESSURE REGULATOR	22670	■	■	■
EC-PRESS REG CONTROL MODULE	22671	■	■	■
EC-AIR FLOW METER	22680	■	■	■
EC-VACUUM CONTROL VALVE	22686	■	■	■
EC-EXHAUST GAS SENSOR	22690	■	■	■
REAR OXYGEN SENSOR	22691	■	■	■
EC-MAIN RELAY	22694	■	■	■
EC-DROPPING RESISTOR	22695	■	■	■
EC-FUEL PUMP RELAY	22697	■	■	■
CAMSHAFT POSITION SENSOR	22730	■	■	■
RING GEAR SENSOR ASSY	22733	■	■	■
INT VLV TMNC CONT POS SENSOR	22734	■	■	■
VEL CNTRL MODULE	22751	■	■	■
EC-AAC VALVE	22781	■	■	■
INT VLV TIMG CNTRL POS SENSR	22934	■	■	■
EC-EGI HARNESS	24011	■	■	■
EC-EGR CONTROL UNIT	25024	■	■	■
EC-REVOLUTION SENSOR	25068	■	■	■
PT-OIL TEMPERATURE SENSOR	25075	■	■	■
221-BOOST SENSOR	25081	■	■	■
EXHAUST GAS PRESSURE SENSOR	25084	■	■	■
EC-EGR RESERVOIR TANK	27085	■	■	■
FUELING STOPPER ASSY	78402	■	■	■

Hybrid / Electric

INVERTER O-RING	14457	■	■	■
PIPE ASSY-CONVERTER INLET	21513	■	■	■
PIPE-PUMP INLET	21537	■	■	■
BRUSH- EARTH	23390	■	■	■
LOCK-LID,CHARGE PORT	23600	■	■	■
HYBRID VEH CNTRL (ECU)	23700	■	■	■
BATTERY VENT TUBE	24413	■	■	■
AC INVERTER RELAY	25303	■	■	■
RELAY-OPENER,CHG PORT	25317	■	■	■
CHARGE PORT LID SWITCH	25318	■	■	■
CHARGE CONNECT LOCK MODE SWITCH	25319	■	■	■
INVERTER CONTROL ASSY	25333	■	■	■
INVERTER CONTROL UNIT	25334	■	■	■
ACTR ASSY - CHARGE PORT LOCK	25350	■	■	■
SWITCH- E-PEDAL	25406	■	■	■
TRACTION MOTOR ASSY	29000	■	■	■
BRUSH ASSY	29017	■	■	■
MOTOR ASSY-DRIVE,REAR	29020	■	■	■
INVERTER (PCU)	29100	■	■	■
INVERTER COMPL-POWER HEAD	29101	■	■	■
HOUSING ASSY-CONNECTOR	29110	■	■	■
INVERTER ASSY	29111	■	■	■
HARNESS ASSY-HIGH VOLTAGE	29115	■	■	■
BOX ASSY-DC/DC	29201	■	■	■
POWER CONVERTER BOX ASSY	29202	■	■	■
CONVERTOR ASSY	29210	■	■	■
BATTERY CONTROLLER ASSY	29300	■	■	■
BATTERY CONTROL ASSY	29310	■	■	■
SENSOR ASSY - MAIN CURRENT	29400	■	■	■
JUNCTION NQ2 BOX ASSY	29401	■	■	■
JUNCTION BOX ASSY	29410	■	■	■
SENSOR - CURRENT	29420	■	■	■
POWER HEAD BRACKET	29433	■	■	■
BATTERY COOLING FAN	29500	■	■	■
BUS BAR REAR MODULE	29501	■	■	■
SENSOR ASSY-BATTERY	29502	■	■	■
BATTERY SENSOR ASSY	29503	■	■	■
BUS BAR LH MODULE	29505	■	■	■
BUS BAR MAIN RH MODULE	29506	■	■	■
BATTERY COOLER	29512	■	■	■
BATTERY CONNECTOR BASE	29531	■	■	■
CHARGER ASSY-BATTERY	29610	■	■	■
BATTERY CHARGE PORT UNIT	29612	■	■	■
CELL MODULE SOLAR	29620	■	■	■
EVSE PACKAGE	29621	■	■	■
INSULATOR	29640	■	■	■
SWITCH - DISCONNECT SERVICE	29701	■	■	■
CABLE POWER CONV TO COMPRESR	29702	■	■	■
CABLE PWR CONV TO LH-ION PAK	29703	■	■	■
CABLE (ON BOARD CHARGER TO DC/DC-3/B)	29707	■	■	■
SW-DISCONNECT SERVICE	29711	■	■	■
BATTERY UPPER COOLING DUCT	29714	■	■	■
BATTERY LOWER COOLING DUCT	29715	■	■	■
BATTERY SIDE COOLING DUCT	29716	■	■	■
BODY SIDE BATTERY COOLG DUCT	29717	■	■	■
BRUSH HOLDER ASSY	30051	■	■	■
TRANSAXLE & MOTOR GENERATOR	31021	■	■	■
OIL PUMP & MOTOR ASSY	31337	■	■	■
MANUAL TRANSMISSION ASSY / REDUCER	32010	■	■	■
BASE-CHARGE PORT	65712	■	■	■
BATTERY FAN INLET DUCT	96712	■	■	■
BATTERY COOLING DUCT INLET	96713	■	■	■
TRACTION MOTOR GASKET	29049	■	■	■
TRACTION MOTOR TERMINAL COVER	29075	■	■	■
TRACTION MOTOR ASSY- WATER INLET	29075	■	■	■
O-RING SEAL	29076	■	■	■
POWER HEAD INVERTER SEAL	29140	■	■	■
INVERTER GUSSET	291C1	■	■	■
POWER DELIVERY MODULE	292C0	■	■	■
CABLE ASSY 2JNCTN TO PWR HEAD	297A0	■	■	■

Infotainment System

REAR WINDOW ANTENNA AMP	25190	■	■	■
AUDIO AMPLIFIER RELAY	25198	■	■	■
CONTROL ASSY-IT MASTER	25914	■	■	■
NAVI GPS ANTENNA ASSY	25957	■	■	■
CABLE-GPS ANTENNA FEEDER	27531	■	■	■
SPEAKER	27933	■	■	■
SPEAKER - WOOFER	27934	■	■	■
CABLE-AUX AUDIO SYSTEM	27946	■	■	■
ANTENNA	27960	■	■	■
CONDENSER	27984	■	■	■
RADIO FINISHER	28041	■	■	■
TUNER ASSY - AV	28050	■	■	■
AMPLIFIER, PRE-OR WOOFER	28060	■	■	■
REAR AMPLIFIER	28063	■	■	■
POWER SUPPLY BOX	28089	■	■	■
NAVI DISPLAY ASSY	28090	■	■	■
FES Video Monitor	28091	■	■	■
DISPLAY ASSY-INTEGRATED	28094	■	■	■
CABLE-LVDS AUDIO SYSTEM	28096	■	■	■
DVD UNIT	28119	■	■	■
DISK EJECT SWITCH	28123	■	■	■
TWEETER-RR DOOR	28138	■	■	■
CD AUTO CHANGER	28184	■	■	■
ANT ASSY-SAT	28205	■	■	■
ANTENNA ROD/MAST	28218	■	■	■
SAT ANTENNA ASSY	28228	■	■	■
FEEDER ASSY - ANTENNA	28243	■	■	■
FEEDER ASSY (TEL ADPTR/BLUE TOOTH)-ANT	28245	■	■	■
ANTENNA-ADAPTOR	28247	■	■	■
CONTROL PANEL-FES	28259	■	■	■
SWITCH-REMOCON	28267	■	■	■
REMOTE CONTROL RADIO SWITCH	28268	■	■	■
PHONE-HEAD	28310	■	■	■
UNIT-MICROPHONE MIXING	28312	■	■	■
CONTROL ASSY-AUDIO VISUAL	28330	■	■	■
CONTROL UNIT ASSY-DISPLAY	28332	■	■	■
DCM CONTROL UNIT	28340	■	■	■
NAVI TRANSFER ASSY	28344	■	■	■
BONDING WIRE	28360	■	■	■
AUDIO FUNCTION SWITCH	28394	■	■	■
NAVI SWITCH ASSY	28396	■	■	■
AV/NAVI SWITCH ASSEMBLY	28397	■	■	■
IPOD ADAPTER UNIT	28411	■	■	■
AUX AUDIO SYS CONNECTOR	28413	■	■	■

HEADPHONE AMPLIFIER	28438	■	■	■
USB JACK ASSY	28483	■	■	■
FES Video Cassette Player	28706	■	■	■
CASSETTE PLAYER/DECK	29200	■	■	■
SOUND BALANCER	29350	■	■	■
CLARION RADIO/COMBO UNIT	2790A	■	■	■
HITACHI RADIO/COMBO UNIT	2790B	■	■	■
PANASONIC RADIO/COMBO UNIT	2790C	■	■	■
ELD/QUEST RADIO/COMBO UNIT	2790F	■	■	■
BOSE SPEAKER	2793A	■	■	■
CLARION SPEAKER AMP	2806C	■	■	■
ELD (QUEST)SPKR AMP	2806F	■	■	■
PANASONIC (QST) SPKR AMP	2806P	■	■	■
SONY SPKR AMP	2806S	■	■	■
CLARION CD PLAYER	2818A	■	■	■
PANASONIC CD PLAYER	2818C	■	■	■
SONY CD PLAYER	2818D	■	■	■
ALPINE CD AUTOCHANGER	2818E	■	■	■
FORD (ELD) CD AUTOCHANGER	2818F	■	■	■
CLARION TAPE DECK	2920A	■	■	■
HITACHI TAPE DECK	2920B	■	■	■
PANASONIC TAPE DECK	2920C	■	■	■
DVD VIDEO CONSOLE	AA017	■	■	■
MOBILE ENT SYS	AA018	■	■	■
SATELLITE RADIO ANTENNA ASSY	AA025	■	■	■
AV TUNER/SAT	AA055	■	■	■
CD CARTRIDGE	B8118	■	■	■

Steering

ADJUSTING BAR	11945	■	■	■
SLIP RING	25694	■	■	■
STEERING SENSOR ASSY	28475	■	■	■
STOPPER BOLT CAP	40039	■	■	■
BEAM-REAR AXLE	43011	■	■	■
STEERING ANGLE SENSOR ASSY	47945	■	■	■
PT-RACK & PINION ASSY/MANUAL	48001	■	■	■
PT-STEERING GEAR ASSY	48010	■	■	■
PT-STEERING GEAR HOUSING	48011	■	■	■
PT-STEERING GEAR PINION	48023	■	■	■
PT-PINION GEAR/WORM BEARING	48025	■	■	■
PT-O-RING	48035	■	■	■
PT-STEERING RUBBER COUPLING	48070	■	■	■
STEERING UPPER JOINT ASSY	48071	■	■	■
PT-STEERING COUPLING FLANGE	48076	■	■	■
STEERING LOWER JOINT	48080	■	■	■
PT-STEERING GEAR RACK	48100	■	■	■
PT-SECTOR SHAFT	48103	■	■	■
PT-PINION/WORM OIL SEAL	48125	■	■	■
PT-SECTOR SHAFT BEARING	48127	■	■	■
PT-SECTOR SHFT ADJ SCREW/NUT	48135	■	■	■
PT-SECTOR SHAFT OIL SEAL	48137	■	■	■
PT-STEERING WORM ASSY	48150	■	■	■
ADJUSTER	48231	■	■	■
RACK MOUNTING INSULATOR	48376	■	■	■
STEERING WHEEL ASSY	48400	■	■	■
LOCK NUT	48401	■	■	■
HEATED STEERING WHEEL ASSY	48402	■	■	■
STEERING GEAR ARM	48502	■	■	■
STEERING GEAR LOCK NUT	48503	■	■	■
PT-SIDE ROD ASSY	48510	■	■	■
SIDE ROD BAR	48512	■	■	■
PT-LOCK NUT	48514	■	■	■
PT-OUTER SOCKET	48520	■	■	■
PT-INNER SOCKET	48521	■	■	■
PT-SLOTTED NUT	48523	■	■	■
STEERING IDLER ARM ASSY	48530	■	■	■
ST. IDLER FIXING BOLT & NUT	48534	■	■	■
STEERING IDLER LOCK NUT	48535	■	■	■
CROSS ROD ASSY	48560	■	■	■
SIDE ROD CLIP	48562	■	■	■
STEERING DAMPER	48611	■	■	■
SIDE ROD/DAG LINK	48630	■	■	■
STEERING LOCK ASSY	48700	■	■	■
TRANSFER GEAR ASSY	48760	■	■	■
STEERING COLUMN ASSY	48805	■	■	■
TELESCOPIC LEVER ASSY	48815	■	■	■
PT-STEERING COLUMN SHAFT	48820	■	■	■
PT-UPPER COLUMN SHAFT	48821	■	■	■
STEERING COLUMN TUBE & SHFT	48850	■	■	■
PT-JACKET TUBE	48860	■	■	■
PT-UPPER JACKET TUBE	48861	■	■	■
PT-ST UPPER BEARING/COLLAR	48910	■	■	■
STEERING LOWER BEARING/COLLR	48911	■	■	■
PT-ST LOWER BEARING/COLLAR	48920	■	■	■
STEERING COLUMN CLAMP	48960	■	■	■
TILT LEVER	48970	■	■	■
TILT MOTOR ASSY	48990	■	■	■
TELESCOPIC MOTOR ASSY	48991	■	■	■
TILT SENSOR ASSY	48992	■	■	■
TELESCOPIC SENSOR ASSY	48993	■	■	■
PT-RACK & PINION ASSY, POWER	49001	■	■	■
PT-POWER ST OIL PUMP ASSY	49110	■	■	■
PT-PUMP RESERVOIR TANK	49115	■	■	■
POWER STEERING PUMP RESERV/R	49180	■	■	■
PT-PUMP CAP & FILTER	49181	■	■	■
TANK COVER - OIL PUMP	49185	■	■	■
POWER STEERING GEAR ASSY	49200	■	■	■
PT-O-RING	49203	■	■	■
PT-PINION OIL SEAL	49226	■	■	■
PT-RACK PACKING	49297	■	■	■
PT-STUB SHAFT OIL SEAL	49365	■	■	■
PT-RACK BUSHING ASSY	49522	■	■	■
PT-O-RING	49525	■	■	■
PT-CYLINDER TUBE	49561	■	■	■
PRESSURE TUBE ASSY	49716	■	■	■
P/S TUBE ASSY	49719	■	■	■
POWER STEERING OIL COOLER	49721	■	■	■
POWER STEER OIL PRESS SWITCH	49761	■	■	■
AIR CONTROL VALVE	49762	■	■	■
FLOW CONTROL VALVE	49810	■	■	■
PRESSURE CONTROL VALVE ASSY	49836	■	■	■
CUT OFF VALVE ASSY	55780	■	■	■
VARIABLE RATIO STRN CNTRL	28540	■	■	■
TILT & TELESCOPIC MOTOR KIT	08990	■	■	■

DIAMOND CARE PROTECTION PLAN[®]



Extended Mechanical Protection

- Protect essential vehicle systems beyond your factory warranty – up to 10 years and 120,000 miles
- All plans include 24/7 Emergency Roadside Assistance plus Towing, Trip Interruption, and Car Rental Benefits
- Transferable should you sell before your coverage expires, which may help enhance resale value

Choose our Supreme Plan for the ultimate peace-of-mind protection for your new or pre-owned vehicle:

The Supreme Plan offers exclusionary coverage, which is the highest level of coverage that a vehicle qualifies for once it is outside the manufacturer's warranty.

COVERAGE SO EXTENSIVE, ONLY A FEW ITEMS / SYSTEMS ARE NOT COVERED: exclusions include but are not limited to items such as paint/body, interior trim, head lamp/tail lamp assemblies and vehicle maintenance.

The Deluxe and Powertrain Plans cover the repair cost for mechanical breakdown of the parts listed on the Diamond Care VSC after your vehicle's warranty expires.

Disclaimer: THIS BROCHURE, WHICH IS LIMITED BY SIZE, IS NOT A CONTRACT. READ A SAMPLE DIAMOND CARE CONTRACT AT YOUR DEALER, AND READ YOUR ACTUAL SERVICE CONTRACT BECAUSE ITS TERMS, CONDITIONS, EXCLUSIONS, AND LIMITATIONS CONTROL.

Notice: In compliance with federal laws, the contents of this brochure should be interpreted and understood within the meaning of a "Service Contract" as defined in Federal Law. (See 15 USCS Sec. 2301 (8).)

In FL, MO, ND and OR, Diamond Care is backed by Nissan Extended Services North America, Inc., P.O. Box 685004, Franklin, TN 37068-5004. FL License #60128.

Replacement of any part will be made with a new, remanufactured or pre-owned part of like kind and quality in use at the time of repair.

Diamond Care Protection Plan and the Mitsubishi logo are registered trademarks of Mitsubishi Motors North America, Inc.

©2022 Nissan Extended Services North America, Inc. All rights reserved.

You can contact us at (833) 700-7783

Please visit www.diamondcareplan.com