

# COMPONENT COVERAGE GUIDE

## DIAMOND CARE PROTECTION PLAN<sup>®</sup>



**MITSUBISHI  
MOTORS**

Drive your Ambition


## Why Diamond Care?

For more than 35 years, we've provided Service You Can Trust - your choice of repair facility from our nationwide network of Mitsubishi dealers and authorized repair facilities. Enjoy worry-free driving and the peace of mind that comes with a Diamond Care Extended Protection Plan.

### Protect Your Investment

- A Diamond Care Protection Plan can protect you from unexpected repair costs once your factory warranty expires
- Choice of plan that best suits your needs with up to 15 time/mileage options available
- Payment-free service, other than your deductible - Dealers are paid directly
- New & Pre-Owned Vehicles as well as non-Mitsubishi vehicles are protected by Diamond Care

### Long Term Coverage

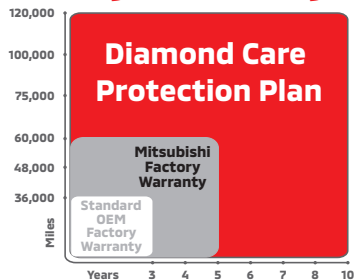

- Cover essential vehicle systems beyond your factory warranty - up to 10 years and 120,000 miles<sup>1</sup>

## Additional Benefits

Start immediately and help to create a worry-free driving experience. No deductible will apply for these benefits.

### Emergency Roadside Assistance

- 24 hours a day, 365 days a year

### Towing

- Reimbursement for towing to the nearest repair facility, up to \$100 per claim

### Tire Service

- \$100 reimbursement for flat tire change (with good spare)


### Trip Interruption

- Reimbursement up to \$500 for alternate transportation, meals and lodging with covered repair when you are 100+ miles from home

### Car Rental Assistance

- Reimbursement for actual expenses of substitute transportation up to 5 days at \$42/day, maximum of \$210 per covered repair

Nearly 50% of all Roadside Assistance calls are due to non-mechanical issues.

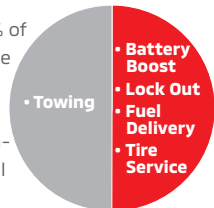

<sup>1</sup>10 year / 100,000 mile term only available on New and CPO Mitsubishi vehicles.

# Guard Against the Rising Cost of Repairs


You wouldn't give up the manufacturer's warranty on your new purchase for a small discount, so why wouldn't you enhance the mechanical protection for a few extra dollars?

# Component Coverage<sup>2</sup> - The Supreme Plan

Covers over 2,035 parts; Deluxe 1,330; Powertrain 630

Vehicle Systems	Supreme	Deluxe	Powertrain
Engine	●	●	○
Transmission	●	●	○
Drive Axle (FWD/RWD/AWD)	●	●	○
Hybrid / Electric Vehicle <sup>3</sup>	●	○	○
Brakes	●	○	○
Electrical	●	○	○
Fuel System	●	○	○
Steering	●	○	○
Suspension	●	○	○
Air Conditioner / Heater	●	○	○
Body & Interior	●	○	○
Advanced Driver Assistance Systems	○	○	○
Infotainment System	○	○	○

● Comprehensive coverage   ● Effective coverage   ○ No coverage  
<sup>2</sup> Covered components are subject to change. Totals may vary by Model & Year. For complete information concerning components covered, and those components which are excluded from coverage, please refer to the Diamond Care vehicle service contract or contact your dealer.  
<sup>3</sup> High voltage battery is excluded from coverage.

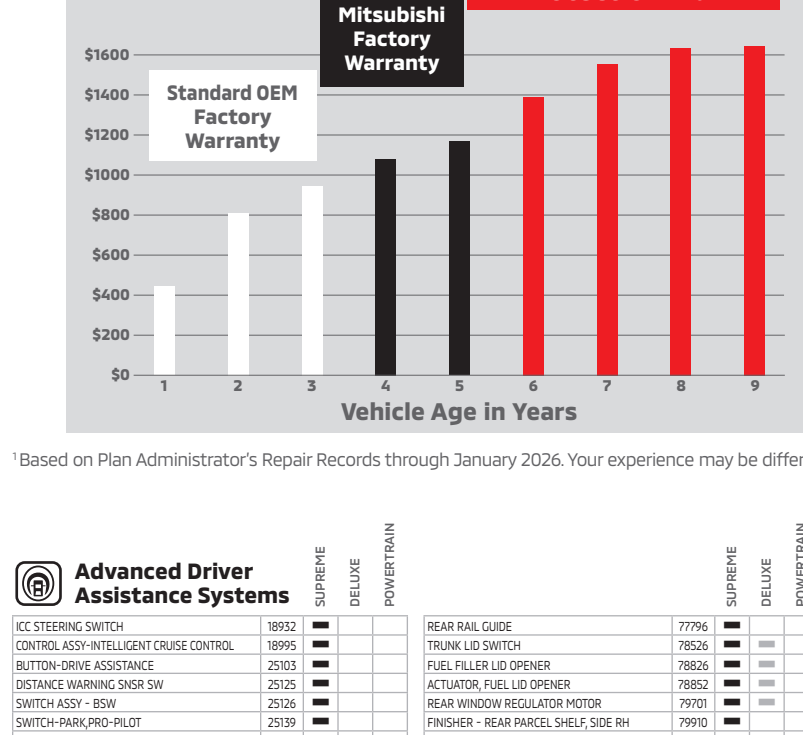

<sup>1</sup> Based on Plan Administrator's Repair Records through January 2026. Your experience may be different.

Advanced Driver Assistance Systems	Supreme	Deluxe	Powertrain	Supreme	Deluxe	Powertrain	Supreme	Deluxe	Powertrain			
ICC STEERING SWITCH	18932	18932	18932	REAR RAIL LOCK	77796	77796	PT-SIDE BEARING	38640	38640	OIL CATCH PLATE	11112	11112
CONTROL ASSY-INTELLIGENT CRUISE CONTROL	18995	18995	18995	TRUNK LID SWITCH	78826	78826	DIFF SIDE BEARING ASSY	38462	38462	PT/NP-OIL PAN BOTTOM COVER	11115	11115
BUTTON-DRIVE ASSISTANCE	25103	25103	25103	FUEL FILLER LID OPENER	78826	78826	POSITION SWITCH ASSY	38481	38481	PT-OIL PAN GASKET	11121	11121
DISTANCE WARNING SNR SW	25125	25125	25125	ACTUATOR, FUEL LID OPENER	78852	78852	DRIVE FLANGE	38572	38572	PT-DIPSTICK	11145	11145
SWITCH ASSY - BSW	25126	25126	25126	FRONT WINDOW REGULATOR MOTOR	79901	79901	PT-4WD FRONT DRIVE SHAFT	38548	38548	ENGINE OIL LEVEL SENSOR	11147	11147
SWITCH-PARK-PRO-PILOT	25139	25139	25139	FINISHER - REAR PARCEL SHELF SIDE RH	79910	79910	PT-4WD RING & PINION SET	38540	38540	INSULATOR, ENG. MOUNT, RH	11151	11151
ICC BRAKE HOLD RELAY	25184	25184	25184	FINISHER - REAR PARCEL SHELF SIDE LH	79911	79911	PT-4WD FRONT PINION BEARING	38541	38541	INSULATOR-REAR MOTOR MOUNT, RH	11171	11171
ICC STRUNG SWITCH	25185	25185	25185	FINISHER - REAR PARCEL SHELF SIDE LH	79912	79912	PT-4WD REAR PINION BEARING	38542	38542	INSULATOR-REAR MOTOR MOUNT, FRONT	11176	11176
ICC BRAKE SWITCH	25186	25186	25186	FRONT STOPPER LINK	80430	80430	PT-4WD PINION BEARING SPACER	38543	38543	LH ENGINE MOUNT INSULATOR	11215	11215
AROUND VIEW MONITOR SWITCH	25308	25308	25308	FRONT DOOR LOCK	80502	80502	PT-4WD DRIVE PINION OIL SEAL	38544	38544	FRONT MOTOR INSULATOR	11220	11220
SWITCH-STEERING WHEEL, PRO PILOT	25550	25550	25550	REMOTE CONTROL	80512	80512	PT-4WD COMPANION FLANGE	38545	38545	TRANSMISSION LOWER MOTOR	11221	11221
FRONT SONAR SENSOR BUZZER	25659	25659	25659	DOOR LOCK STRIKER	80570	80570	PT-4WD DIFFERENTIAL CASE	38546	38546	ENGINE MOUNTING FRONT STAY	11237	11237
BUZZER-SONAR SENSOR	25660	25660	25660	DOOR LOCK CYLINDER	80600	80600	PT-4WD SIDE GEAR	38547	38547	ENGINE DAMPER ASSY	11246	11246
SWITCH-SONAR (OFF-PARKING/SONAR)	25965	25965	25965	FRONT DOOR OUTSIDE HANDLE	80605	80605	PT-4WD FRONT DRIVE THRUST WASHER	38548	38548	ENGINE MOUNT INSULATOR ASSY	11259	11259
SONAR SWITCH ASSY	25989	25989	25989	HANDLE ROD	80645	80645	PT-4WD PINION MATE	38549	38549	ENGINE MOUNT DAMPER	11290	11290
FRONT SONAR SENSOR NS	25993	25993	25993	FRONT DOOR INSIDE HANDLE	80700	80700	PT-4WD PIN MATE THRUST WASHER	38550	38550	REAR MOTOR INSULATOR	11320	11320
FRONT CORNER SONAR SENSOR	25994	25994	25994	FRONT WINDOW REGULATOR	80701	80701	PT-4WD PINION MATE SHAFT	38551	38551	ENGINE MOUNT ROLL DAMPER	11325	11325
REAR SONAR SENSOR NS	25996	25996	25996	FRONT WINDOW REGULATOR	80701	80701	PT-4WD SIDE BEARING	38552	38552	DRIVE BELT TENSIONER	11716	11716
SENSOR-SONAR,FRONT SIDE	25998	25998	25998	FRONT REGULATOR MOTOR	80730	80730	PT-4WD DRIVE GEAR BOLT	38553	38553	P/S BELT TENSIONER	11717	11717
SENSOR-SONAR,REAR SIDE	25999	25999	25999	FRONT DOOR MODULE ASSY	80911	80911	SIDE GEAR (CENTER DIFF)	38723	38723	TIMING BELT	11721	11721
BUZZER ASSY-LKS / LOW	26149	26149	26149	LATCH-SLIDE WINDOW	82347	82347	PINION MATE (CENTER DIFF)	38725	38725	SERPENTINE BELT TENSIONER	11750	11750
SWITCH-SONAR (OFF-PARKING/SONAR)	26153	26153	26153	DOOR LOCK RELEASE	82481	82481	ELECTRIC CONTROL COUPLING AS	38763	38763	EC-PCV VALVE & FILTER	11810	11810
IC WARNING CHIME	26353	26353	26353	FRONT WINDOW LOCK	82500	82500	PT-FRONT DRIVE SHAFT	39100	39100	OIL SEPARATOR	11830	11830
BSW/BSI INDICATOR	26370	26370	26370	SLIDING-DOOR CLOSING MOTOR	82530	82530	DRIVE SHAFT ASSY	39400	39400	BLOW BY CONTROL VALVE	11831	11831
CONTROL ASSY-BACK VIEW	26362	26362	26362	AUTO-LOCK DR LOCK ACTUATOR	82550	82550	PT-SPIDER ASSY	39425	39425	FUELING CONTROL VALVE	11832	11832
RADAR - SIDE	26405	26405	26405	SLIDING-DOOR MOTOR	82560	82560	DRIVE SHAFT BOOT	39655	39655	OIL SEPARATOR ASSY	11835	11835
UNIT AVM CONTROL	26406	26406	26406	BACK DOOR OPEN/CLOSE MOTOR	82590	82590	PT-SLIDE JOINT HOUSING	39724	39724	PT-PISTON & PIN SET	12010	12010
CNTY ASSY CAMERA	26416	26416	26416	REAR DOOR OUTSIDE HANDLE	82605	82605	PT-SLIDE JOINT SPIDER ASSY	39920	39920	PT-PISTON RINGS	12033	12033
CAMERA ASSY-SIDE VIEW	26419	26419	26419	REAR DOOR INSIDE HANDLE	82670	82670	PT-4WD DRIVE SHAFT BEARING	40217	40217	PT-CONNECTING ROD & CAP SET	12000	12000
VEHICLE DATA TRANSMITTER ASSY	26420	26420	26420	REAR WINDOW REGULATOR	82700	82700	SIDE SHAFT GREASE SEAL	40223	40223	PT-CONNECTING ROD BEARINGS	12111	12111
CONTROL UNIT-ADAS	26424	26424	26424	REAR WINDOW REGULATOR MOTOR	82730	82730	PT-4WD FREE-RUNNING HUB	40250	40250	PT-PISTON OIL SET	12121	12121
BSW CONTROL	26427	26427	26427	TRUNK LID LOCK ACTUATOR	82730	82730	PT-4WD DRIVE CLUTCH GEAR	40252	40252	ACTUATOR ASSY-HCR	12124	12124
BSW CONTROL ASSY	26428	26428	26428	RR SIDE WINDOW MOTOR	83500	83500	LOCK NUT	40257	40257	HOLDER-VCY PH	12145	12145
CONTROL MODULE - BUZZER,DRIVER ASSISTANT	26429	26429	26429	RR SIDE WINDOW LOCK ASSY	83502	83502	PT-4WD REAR COVER GASKET	40255	40255	PT-IN-VCY ACTUATOR	12146	12146
SENSOR UNIT-INSTRUMENT CLUSTER	26430	26430	26430	RR SIDE WINDOW REGULATOR	83506	83506	REAR AXLE HOUSING	43000	43000	PT-CRANKSHAFT	12200	12200
SENSOR UNIT-INTAKE	26436	26436	26436	SIDE WINDOW CONTROL ASSY	83511	83511	REAR AXLE CASE	43012	43012	PT-MAIN BEARING	12207	12207
CAMERA ASSY - DISTANCE, ICC	26437	26437	26437	SIDE WINDOW CONTROL CABLE	83520	83520	REAR WHEEL HUB	43204	43204	PT-REAR MAINSIDE CAIPSEAL	12279	12279
CAMERA ASSY-BACK VIEW	26442	26442	26442	OUTSIDE HANDLE	83505	83505	REAR AXLE BEARING	43215	43215	REAR RETAINER OIL SEAL	12297	12297
CAMERA ASSY - LKS / LOW	26443	26443	26443	INSIDE HANDLE	83670	83670	PT-REAR AXLE BEARING	43215	43215	CRANKSHAFT PULLEY	12303	12303
CAMERA ASSY-REARVIEW SMART ROOM	26445	26445	26445	REGULATOR WIRE	83702	83702	REAR HUB BOLT	43222	43222	PULLEY BOLT	12309	12309
SC-DRIVE CONTROL BRACKET	26450	26450	26450	REGULATOR MOTOR	83752	83752	REAR WHEEL BEARING NUT	43231	43231	PT-VALVE ASSY	12310	12310
CONTROL MODULE SW	26456	26456	26456	TRUNK DOOR RELEASE	83840	83840	REAR DOOR GREASE SEAL	43232	43232	PT-FUEL INLET VALVE	12325	12325
CAMERA ASSY-FR VIEW	26461	26461	26461	TRUNK, FUEL LID CABLE	83840	83840	PT-REAR AXLE OIL SEAL	43232	43232	PT-DRIVE PLATE ASSY	12331	12331
REAR VIEW CONTROL ASSY	26462	26462	26462	TRUNK OPENER SOLENOID	84471	84471	REAR WHEEL HUB O-RING	43253	43253	PT-IN-VCY PUMP CRANK PULLEY	12350	12350
SOLENOID VALVE ASSY-BACK VIEW CAMERA	26479	26479	26479	STORAGE LID OPENER MOTOR	84671	84671	PT-LOCK NUT	43262	43262	BALANCE UNIT	12416	12416
CAN GATEWAY ONTRAL ASSY	26481	26481	26481	STORAGE LID STOP SWITCH	84680	84680	O-RING SEAL	52405	52405	CAMSHAFT	13001	13001
SOLENOID VALVE ASSY - BACK VIEW CAMERA	26489	26489	26489	AUTO CLOSER-TRUNK LID	84622	84622	DIFF MTR INSULTR ASSY	54710	54710	PT-CAMSHAFT BUSHING	13002	13002
BUZZER-SONAR SENSOR, FRONT	28501	28501	28501	TRUNK LID OPENER CANCEL SWTC	84660	84660	FRNT DFF MTRG MEMBER ASSY	54720	54720	PT-IDLER GEAR	13014	13014
CONTROL UNIT-SONAR SENSOR	28502	28502	28502	TRUNK LID LOCK ACTUATOR	84685	84685	FRNT DFF MTRG STPRP/BMTR	54751	54751	PT-FUEL PUMP CAM	13015	13015
AVM CAMERA FINISHER	73979	73979	73979	SEAT SWITCH	86401	86401	EC-ELECTRICAL	17103	17103	HIGH PRESS SPROCKET PUMP	13020	13020
CAMERA CONTROLLER	28441	28441	28441	SEAT SLIDE MOTOR ASSY	86911	86911	CAP ASSY RAD RESERVOIR TANK	21431	21431	PT-CAMSHAFT OIL SEAL	13024	13024
LANE KEEP CAMERA	28462	28462	28462	SEAT SLIDE GEAR ASSY	86912	86912	EC-DISTRIBUTOR HARNESS	21259	21259	PT-CAMSHAFT GEAR/SPOCKET	13024	13024
SIDE OBSTACLE WARNING SENSOR ASSY	28440	28440	28440	3RD SEAT MOTOR DRIVESHAFT	86913	86913	ALTERNATOR ASSY	23100	23100	PT-SHAFT ASSY	13025	13025
REAR VIEW CAMERA KT	A4158	A4158	A4158	3RD SEAT TRUNION	86914	86914	ALTERNATOR ROTOR	23108	23108	PT-TIMING CHAIN	13028	13028
				FRONT LMIT SWITCH	86970	86970	ALTERNATOR BEARING	23120	23120	PT-TIMING GEAR CASE	13034	13034
				SEAT SLIDE SWITCH	86980	86980	ALTERNATOR BRUSH & HOLDER	23133	23133	PT-FRONT COVER	13035	13035
				SEAT BACK TILT SWITCH	87017	87017	ALTERNATOR PULLEY	23130	23130	PT-TIMING GEAR COVER	13036	13036
				SEAT BACK TILT CANCEL SWITCH	87018	87018	ALTERNATOR DIODE SET	23130	23130	PT-VANOSHAFT FRONT OIL SEAL	13042	13042
				POWER SEAT WIRING HARNESS	87019	87019	STARTER MOTOR ASSY	23300	23300	PT-CAMSHAFT OIL SEAL	13044	13044
				RECLINING DEVICE WIRE ASSY	87043	87043	STARTER FIELD COIL	23306	23306	PT-ROCKER ARM	13046	13046
				FAN AIR CONTROL SWITCH	87106	87106	STARTER ARMATURE	23310	23310	PT-ROCKER SHAFT	13047	13047
				SEAT MOTOR ASSY	87305	87305	STARTER CLUTCH PINION	23312	23312	PT-VALVE ROCKER ARM	13048	13048
				FAN MOTOR CONTROL UNIT	87306	87306	STARTER SOLENOID	23343	23343	SEAL-VTC SPROCKET	13046	13046
				SEAT LIFTER LVR KNOB B7320	87318	87318	STARTER BRUSH	23380	23380	PT-WATER INLET	13049	13049
				SEAT LIFTER LVR KNOB	87320	87320	MAIN HARNESS	24070	24070	EC-INJECTION PUMP DRIVE GEAR	13054	13054
				SEAT LIFTER/THERMOSTAT UNIT	87342	87342	ENGINE ROOM HARNESS	24072	24072	OIL PUMP CHAIN TENSIONER	13070	13070
				SLIDE/LIFT SWITCH	87352	87352	INSTRUMENT HARNESS	24073	24073	BAJANER CHAIN TENSIONER	13071	13071
				PASS PWR SEAT SWITCH W/OCS	87354	87354	BODY HARNESS	24074	24074	VTC SPRING ASSY	13072	13072
				LIFT DEVICE ASSY	87400	87400	TAIL HARNESS	24075	24075	PT-TIMING CHAIN OIL SET	13078	13078
				PWR SEAT RECLINER DRIVE CBLE	87403	87403	CHASSIS HARNESS	24075	24075	PT-CHAIN TENS. SIDE GUIDE	13085	13085
				SEAT LEVER RECLINING KNOB	87418	87418	CONSOLE HARNESS	24030	24030</			

## Engine (cont.)

	SUPREME	DELUXE	POWERTRAIN
PT-OIL PRESSURE SENDING UNIT	25240	■	■
PT-OIL PRESSURE SWITCH	25244	■	■
COOLING FAN CONTROLLER	25305	■	■
COOLING FAN CONTROL SOLENOID	25405	■	■
BLOWER MOTOR TIMER	28972	■	■
PRESSURE TUBE	45455	■	■
SENSOR TURBOCHARGER SPEED	59126	■	■
VALVE ASSY WATER	92231	■	■
TUBE BOOST SENSOR	97195	■	■
INSULATOR-INTAKE PORT	11000	■	■

## Fuel System

EC-AIR CONTROL VALVE	1181	■	
FUEL DAMPER ASSY	11300	■	
EC-EGR TUBE	14120	■	
CHARGE AIR COOLER	14461	■	
EC-POWER VALVE ASSY	14510	■	■
POWER VALVE SOLENOID VALVE	14517	■	■
POWER VALVE ACTUATOR	14518	■	■
EC-EGR CONTROL VALVE	14710	■	
EC-EXHAUST TEMP. SENSOR	14730	■	■
TUBE EGR COOLER INLET	14736	■	■
EC-BPT VALVE	14741	■	■
AIR PUMP	14812	■	■
EC-AIR INJECTION PIPE	14823	■	■
AIR CUT SOLENOID VLV	14830	■	■
EC-AV CONTROL VALVE	14832	■	■
EC-AB VALVE	14835	■	■
EC-AIR INDUCTION VALVE	14854	■	■
SERVICE PORT-EVAP	14939	■	■
SCV SOLENOID VALVE	14951	■	■
POWER VALVE SOLENOID	14952	■	■
EC-EPC VALVE	14953	■	■
EC-EGR SOLENOID VALVE	14954	■	■
EC-VACUUM CUTTING SOLENOID	14955	■	■
EC-MIX RATIO CONT SOLENOID	14956	■	■
EC-THROTTLE CONTROL SOLENOID	14957	■	■
EC-SPARK DELAY VALVE	14958	■	■
EC-PRES REG CONT SOL VALVE	14960	■	■
EC-ALTITUDE COMPENSATOR	16044	■	■
EC-DASH POT	16182	■	■
IDLE SPEED CONTROL UNIT	16250	■	■
AIR DUCT ASSY	16577	■	■
INSULATOR-FUEL PUMP,HIGH PRESSURE	16634	■	■
EC-EPI THROTTLE CHAMBER	17118	■	■
DETONATION SENSOR	22060	■	■
EC-EGR WATER TEMP. SENSOR	22120	■	■
EC-VACUUM TANK	22327	■	■
VIA5 VACUUM TANK ASSY	22328	■	■
CANISTER CONTROL VAC CK SW	22360	■	■
EC-VACUUM SWITCH	22361	■	■
EC-EGR VACUUM CONTROL VALVE	22365	■	■
EC-EGI/ECCS CONTROL UNIT	22611	■	■
THROTTLE VALVE SWITCH	22620	■	■
THROTTLE POSITION SENSOR	22621	■	■
EC-CYL. HEAD TEMP. SENSOR	22632	■	■
INTAKE MAN RUNNER CONTRL SEN	22637	■	■
EC-AIR REGULATOR	22660	■	■
EC-PRESSURE REGULATOR	22670	■	■
EC-PRESS REG CONTROL MODULE	22671	■	■
EC-AIR FLOW METER	22680	■	■
EC-VACUUM CONTROL VALVE	22686	■	■
EC-EXHAUST GAS SENSOR	22690	■	■
REAR OXYGEN SENSOR	22691	■	■
EC-MAIN RELAY	22694	■	■
EC-DROPPING RESISTOR	22695	■	■
EC-FUEL PUMP RELAY	22697	■	■
CAMSHAFT POSITION SENSOR	23730	■	■
RING GEAR SENSOR ASSY	23733	■	■
INT VLV TMNG CONT POS SENSOR	23734	■	■
VEL CNTRL MODULE	23751	■	■
EC-AAC VALVE	23781	■	■
INT VLV TMNG CNTRL POS SENSR	23934	■	■
EC-EGI HARNESS	24011	■	■
EC-EGR CONTROL UNIT	25024	■	■
EC-REVOLUTION SENSOR	25068	■	■
PT-OIL TEMPERATURE SENSOR	25075	■	■
221-BOOST SENSOR	25081	■	■
EXHAUST GAS PRESSURE SENSOR	25084	■	■
EC-EGR RESERVOIR TANK	27085	■	■
FUELING STOPPER ASSY	78402	■	■

## Hybrid / Electric

INVERTER 0-RING	14457	■	■
PIPE ASSY-CONVERTER INLET	21513	■	■
WATER TUBE ASSY- FLOOR,REAR	21530	■	■
WATER HOSE - DRIVE MOTOR,REAR	21531	■	■
HOSE INVERTER OUTLET	21534	■	■
PIPE-PUMP INLET	21537	■	■
WATER HOSE-TRACTION MOTOR REAR	21555	■	■
WATER HOSE-TRACTION MOTOR CENTER	21556	■	■
WATER HOSE-TRACTION MOTOR FRONT	21557	■	■
WATER TUBE-TRACTION MOTOR REAR	21558	■	■
WATER TUBE-TRACTION MOTOR CENTER	21559	■	■
WATER TUBE-TRACTION MOTOR FRONT	21560	■	■
BRUSH-EARTH	23390	■	■
LOCK-LID,CHARGE PORT	23600	■	■
HYBRID VEH CNTRL (ECU)	23700	■	■
VCM CONTROL UNIT	23740	■	■
BATTERY VENT TUBE	24413	■	■
AC INVERTER RELAY	25303	■	■
RELAY-OPENER,CHG PORT	25317	■	■
CHARGE PORT LID SWITCH	25318	■	■
CHARGE CONNECT LOCK MODE SWITCH	25319	■	■
INVERTER CONTROL ASSY	25333	■	■
INVERTER CONTROL UNIT	25334	■	■
ACTR ASSY - CHARGE PORT LOCK	25350	■	■
SWITCH- E-PEDAL	25406	■	■
UNIT-INVERTER	28313	■	■
TRACTION MOTOR ASSY	29000	■	■
WATER OUTLET	29005	■	■
WATER INLET	29006	■	■
BRUSH ASSY	29017	■	■
MOTOR ASSY-DRIVE,REAR	29020	■	■
INVERTER (PCU)	29100	■	■
INVERTER COMPL-POWER HEAD	29101	■	■
HOUSING ASSY-CONNECTOR	29110	■	■
INVERTER ASSY	29111	■	■
HARNESS ASSY-HIGH VOLTAGE	29115	■	■
BOX ASSY-DC/DC	29201	■	■
POWER CONVERTER BOX ASSY	29202	■	■
CONVERTOR ASSY	29210	■	■
COVER-PDM	29230	■	■
BATTERY CONTROLLER ASSY	29300	■	■
BATTERY CONTROL ASSY	29310	■	■
SENSOR ASSY - MAIN CURRENT	29400	■	■
JUNCTION NO2 BOX ASSY	29401	■	■
JUNCTION BOX ASSY	29410	■	■
SENSOR - CURRENT	29420	■	■
POWER HEAD BRACKET	29433	■	■
BATTERY COOLING FAN	29500	■	■
BUS BAR REAR MODULE	29501	■	■
SENSOR ASSY-BATTERY	29502	■	■
BATTERY SENSOR ASSY	29503	■	■
BUS BAR LH MODULE	29505	■	■
BUS BAR MAIN RH MODULE	29506	■	■
HEATER RELAY	29508	■	■
HEATER STACK	29510	■	■
BATTERY COOLER	29512	■	■
BATTERY CONNECTOR BASE	29531	■	■
CHARGER ASSY-BATTERY	29610	■	■
BATTERY CHARGE PORT UNIT	29612	■	■
CELL MODULE SOLAR	29620	■	■
EVSE PACKAGE	29621	■	■
INSULATOR	29640	■	■
SWITCH - DISCONNECT SERVICE	29701	■	■
CABLE POWER CONV TO COMPRESR	29702	■	■
CABLE PWR CONV TO LH-ION PAK	29703	■	■
CABLE (ON BOARD CHARGER TO DC/DC-3/B)	29707	■	■
SW-DISCONNECT SERVICE	29711	■	■
BATTERY UPPER COOLING DUCT	29714	■	■
BATTERY LOWER COOLING DUCT	29715	■	■
BATTERY SIDE COOLING DUCT	29716	■	■
BODY SIDE BATTERY COOLG DUCT	29717	■	■
BRUSH HOLDER ASSY	30051	■	■
TRANSAXLE & MOTOR GENERATOR	31021	■	■
OIL PUMP & MOTOR ASSY	31337	■	■
MANUAL TRANSMISSION ASSY / REDUCER	32010	■	■
REDUCER BREATHER HOSE	32182	■	■
DRIVE ASSY-FINAL,REAR	38315	■	■
BASE-CHARGE PORT	65712	■	■
BATTERY FAN INLET DUCT	96712	■	■
BATTERY COOLING DUCT INLET	96713	■	■
DC/DC CONVERTER INLET DUCT	96734	■	■
DC/DC CONVERTER OUTLET DUCT	96734	■	■
TRACTION MOTOR GASKET	29049	■	■
TRACTION MOTOR TERMINAL COVER	29075	■	■
TRACTION MOTOR ASSY- WATER INLET	29075	■	■
O-RING SEAL	29076	■	■
POWER HEAD INVERTER SEAL	291A0	■	■
INVERTER GUSSET	291C1	■	■
INVERTER COVER	291X2	■	■
POWER DELIVERY MODULE	292C0	■	■
CABLE ASSY 2JNTCN TO PWR HEAD	297A0	■	■

## Infotainment System

REAR WINDOW ANTENNA AMP	25190	■	■
AUDIO AMPLIFIER RELAY	25198	■	■
CONTROL ASSY-IT MASTER	25914	■	■
NAVI GPS ANTENNA ASSY	25957	■	■
CABLE-GPS ANTENNA FEEDER	27531	■	■
SPEAKER	27933	■	■
SPEAKER - WOOFER	27934	■	■
CABLE-AUX AUDIO SYSTEM	27946	■	■
ANTENNA	27960	■	■
CONDENSER	27984	■	■
RADIO FINISHER	28041	■	■
TUNER ASSY - AV	28050	■	■
AMPLIFIER, PRE-OR WOOFER	28060	■	■
REAR AMPLIFIER	28063	■	■
POWER SUPPLY BOX	28089	■	■
NAVI DISPLAY ASSY	28090	■	■
FES Video Monitor	28091	■	■
DISPLAY ASSY-INTEGRATED	28094	■	■
CABLE-LVDS AUDIO SYSTEM	28096	■	■
DVD UNIT	28119	■	■
DISK EJECT SWITCH	28123	■	■
TWEETER-RR DOOR	28138	■	■
CD AUTO CHANGER	28184	■	■
ANT ASSY-SAT	28208	■	■
ANTENNA ROD/MAST	28215	■	■
SAT ANTENNA ASSY	28228	■	■
FEEDER ASSY - ANTENNA	28243	■	■
FEEDER ASSY (TEL ADPTR/BLUE TOOTH)-ANT	28245	■	■
ANTENNA-ADAPTOR	28247	■	■
CONTROL PANEL-FES	28259	■	■
SWITCH-REMOCON	28267	■	■
REMOTE CONTROL RADIO SWITCH	28268	■	■
PHONE-HEAD	28310	■	■
UNIT-MICROPHONE MIXING	28312	■	■
CONTROL ASSY-AUDIO VISUAL	28330	■	■
CONTROL UNIT ASSY-DISPLAY	28332	■	■
DCM CONTROL UNIT	28340	■	■
NAVI TRANSFER ASSY	28344	■	■
BONDING WIRE	28360	■	■
AUDIO FUNCTION SWITCH	28394	■	■
NAVI SWITCH ASSY	28396	■	■

	SUPREME	DELUXE	POWERTRAIN
AV/NAVI SWITCH ASSEMBLY	28397	■	■
IPOD ADAPTER UNIT	28411	■	■
AUX AUDIO SYS CONNECTOR	28413	■	■
HEADPHONE AMPLIFIER	28438	■	■
USB JACK ASSY	28483	■	■
FES Video Cassette Player	28706	■	■
CASSETTE PLAYER/DECK	29200	■	■
SOUND BALANCER	29350	■	■
CLARION RADIO/COMBO UNIT	2790A	■	■
HITACHI RADIO/COMBO UNIT	2790B	■	■
PANASONIC RADIO/COMBO UNIT	2790C	■	■
ELD/QUEST RADIO/COMBO UNIT	2790F	■	■
BOSE SPEAKER	2793A	■	■
CLARION SPEAKER AMP	2806C	■	■
ELD (QUEST)SPKR AMP	2806F	■	■
PANASONIC (QST) SPKR AMP	2806P	■	■
SONY SPKR AMP	2806S	■	■
CLARION CD PLAYER	2818A	■	■
PANASONIC CD PLAYER	2818C	■	■
SONY CD PLAYER	2818D	■	■
ALPINE CD AUTOCHANGER	2818E	■	■
FORD (ELD) CD AUTOCHANGER	2818F	■	■
CLARION TAPE DECK	2920A	■	■
HITACHI TAPE DECK	2920B	■	■
PANASONIC TAPE DECK	2920C	■	■
DVD VIDEO CONSOLE	AA017	■	■
MOBILE ENT SYS	AA018	■	■
SATELLITE RADIO ANTENNA ASSY	AA025	■	■
AV TUNER/SAT	AA05S	■	■
CD CARTRIDGE	B8118	■	■

## Steering

ADJUSTING BAR	11945	■	■
SLIP RING	25694	■	■
STEERING SENSOR ASSY	28475	■	■
STOPPER BOLT CAP	40039	■	■
BEAM-REAR AXLE	43011	■	■
STEERING ANGLE SENSOR ASSY	47945	■	■
PT-RACK & PINION ASSY/MANUAL	48001	■	■
PT-STEERING GEAR ASSY	48010	■	■
PT-STEERING GEAR HOUSING	48011	■	■
PT-STEERING GEAR PINION	48023	■	■
PT-PINION GEAR/WORM BEARING	48025	■	■
PT-O-RING	48035	■	■
PT-STEERING RUBBER COUPLING	48070	■	■
STEERING UPPER JOINT ASSY	48071	■	■
PT-STEERING COUPLING FLANGE	48076	■	■
STEERING LOWER JOINT	48080	■	■
PT-STEERING GEAR RACK	48100	■	■
PT-SECTOR SHAFT	48103	■	■
PT-PINION/WORM OIL SEAL	48125	■	■
PT-SECTOR SHAFT BEARING	48127	■	■
PT-SECTOR SHFT ADJ SCREW/NUT	48135	■	■
PT-SECTOR SHAFT OIL SEAL	48137	■	■
PT-STEERING WORM ASSY	48150	■	■
ADJUSTER	48231	■	■
RACK MOUNTING INSULATOR	48376	■	■
STEERING WHEEL ASSY	48400	■	■
LOCK NUT	48401	■	■
HEATED STEERING WHEEL ASSY	48402	■	■
STEERING GEAR ARM	48502	■	■
STEERING GEAR LOCK NUT	48503	■	■
PT-SIDE ROD ASSY	48510	■	■
SIDE ROD BAR	48512	■	■
PT-LOCK NUT	48514	■	■
PT-OUTER SOCKET	48520	■	■
PT-INNER SOCKET	48521	■	■
PT-SLOTTED NUT	48523	■	■
STEERING IDLER ARM ASSY	48530	■	■
ST. IDLER FIXING BOLT & NUT	48534	■	■
STEERING IDLER LOCK NUT	48535	■	■
CROSS ROD ASSY	48560	■	■
SIDE ROD CLIP	48562	■	■
STEERING DAMPER	48611	■	■
SIDE ROD/DRAK LINK	48630	■	■
STEERING LOCK ASSY	48700	■	■
TRANSFER GEAR ASSY	48760	■	■
STEERING COLUMN ASSY	48805	■	■
TELESCOPIC LEVER ASSY	48815	■	■
PT-STEERING COLUMN SHAFT	48820	■	■
PT-UPPER COLUMN SHAFT	48821	■	■
LOWER COLUMN SHAFT ASSY	48822	■	■
STEERING COLUMN TUBE & SHFT	48850	■	■
PT-JACKET TUBE	48860	■	■
PT-UPPER JACKET TUBE	48861	■	■
PT-ST UPPER BEARING/COLLAR	48910	■	■
STEERING LOWER BEARING/COLLR	48911	■	■
PT-ST LOWER BEARING/COLLAR	48920	■	■
STEERING COLUMN CLAMP	48960	■	■
TILT LEVER	48970	■	■
TILT MOTOR ASSY	48990	■	■
TELESCOPIC MOTOR ASSY	48991	■	■
TILT SENSOR ASSY	48992	■	■
TELESCOPIC SENSOR ASSY	48993	■	■
PT-RACK & PINION ASSY, POWER	49001	■	■
PT-POWER ST OIL PUMP ASSY	49110	■	■
PT-PUMP RESERVOIR TANK	49115	■	■
POWER STEERING PUMP RESERV	49180	■	■
PT-PUMP CAP & FILTER	49181		

# DIAMOND CARE PROTECTION PLAN<sup>®</sup>



## Extended Mechanical Protection

- Protect essential vehicle systems beyond your factory warranty – up to 10 years and 120,000 miles
- All plans include 24/7 Emergency Roadside Assistance plus Towing, Trip Interruption, and Car Rental Benefits
- Transferable should you sell before your coverage expires, which may help enhance resale value

### Choose our Supreme Plan for the ultimate peace-of-mind protection for your new or pre-owned vehicle:

The Supreme Plan offers exclusionary coverage, which is the highest level of coverage that a vehicle qualifies for once it is outside the manufacturer's warranty.

COVERAGE SO EXTENSIVE, ONLY A FEW ITEMS / SYSTEMS ARE NOT COVERED: exclusions include but are not limited to items such as paint/body, interior trim, head lamp/tail lamp assemblies and vehicle maintenance.

The Deluxe and Powertrain Plans cover the repair cost for mechanical breakdown of the parts listed on the Diamond Care VSC after your manufacturer's warranty expires.

Disclaimer: THIS BROCHURE, WHICH IS LIMITED BY SIZE, IS NOT A CONTRACT. READ A SAMPLE DIAMOND CARE CONTRACT AT YOUR DEALER, AND READ YOUR ACTUAL SERVICE CONTRACT BECAUSE ITS TERMS, CONDITIONS, EXCLUSIONS, AND LIMITATIONS CONTROL.

Notice: In compliance with federal laws, the contents of this brochure should be interpreted and understood within the meaning of a "Service Contract" as defined in Federal Law. (See 15 USCS Sec. 2301 (8).)

**In FL (License #60128), MO, ND, OR, and VT, Diamond Care is backed by Nissan Extended Services North America, Inc. In all other states, Nissan Extended Services North America, G.P. Both are located at P.O. Box 685004, Franklin, TN 37068-5004.**

Replacement of any part will be made with a new, remanufactured or pre-owned part of like kind and quality in use at the time of repair.

Diamond Care Protection Plan and the Mitsubishi logo are registered trademarks of Mitsubishi Motors North America, Inc.

©2026 Nissan Extended Services North America, G.P. All rights reserved.

You can contact us at 800-647-7261

Please visit [www.diamondcareplan.com](http://www.diamondcareplan.com)